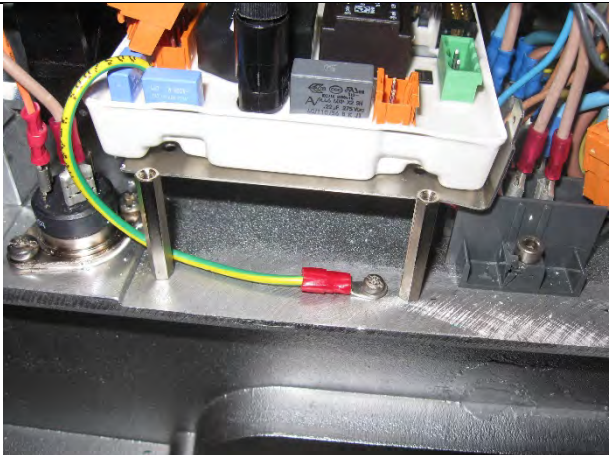
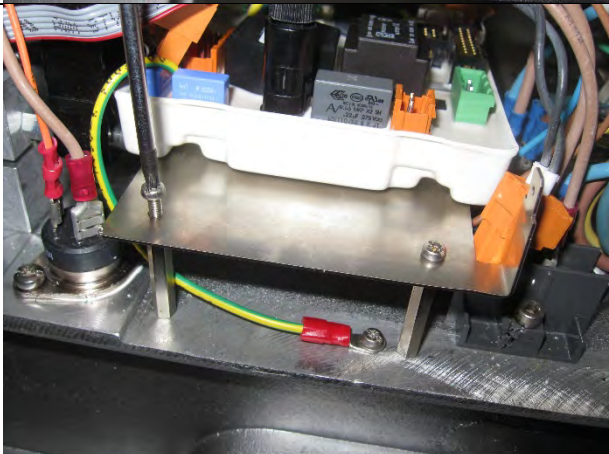
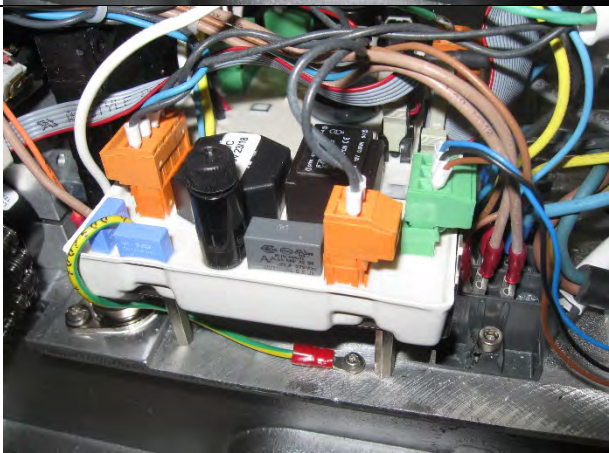


在B版的TRN 06主板上，接地装置必须直接连接在底板上，
重要：连接面和螺孔必须保持清洁，没有油脂！要用砂纸清除接地区域的氧化物。

At the TRN 06 circuits from Revision B, the earth connection must be screwed directly to the undercarriage. **Important: The contact surface and the hole for the earth connection must be clean and free of grease! Any oxidation on the chassis must be removed in the area of the earthing connection with an abrasive paper.**

	<p>在锁紧固定支架162.720之前，必须先用M3*6的螺丝和垫圈把TRN 06主板安装在底板上。</p> <p>Before the mounting Holder 162.070 is screwed, the Earth connection of the TRN 06 circuit must be screwed to the chassis using the M3x6 cheese head screw and the M3 lockwasher washer</p>
	<p>接地后，把主板的垫板用4个M3*8的螺丝固定。</p> <p>Then the mounting plate can be screwed down with the M3 x 8 cheese head screws (4x)</p>
	<p>TRN 06主板固定在垫片上，再连接线缆。</p> <p>Now the circuit TRN 06 can be snapped onto the mounting plate and wired.</p>